


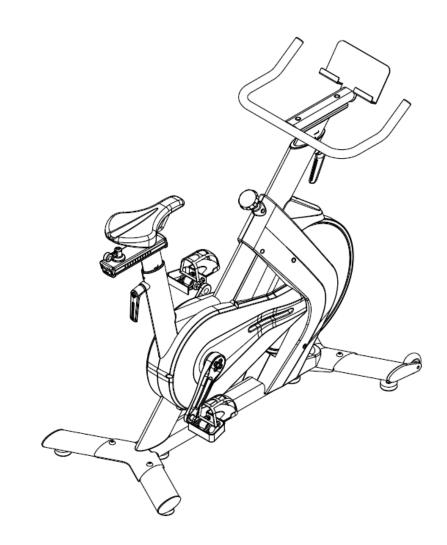

Spinning Bike Pro S200

OWNER'S MANUAL



Safe Use Instructions

WARNING: This manual contains important safety information. Please read the safety instructions carefully before using the device.


- Children and people with disabilities cannot access or use this device when unsupervised.
- Before training, please read the safety warnings and exercise instructions on the device carefully. If you feel unwell during exercise, please stop training and consult a doctor immediately.
- Incorrect or over-training may damage your health.
- Regular inspection and maintenance of the equipment, to ensure the integrity and robustness of the various parts of the equipment.
- Pay attention to the inspection and maintenance of vulnerable parts on the device.
- If the instrument parts are damaged or an abnormal sound occurs,
 stop using it immediately until it is repaired.
- The instrument should be installed in a stable place and leveled.
- Before use, adjust the device according to your personal situation,
 such as the size of the resistance, the position of the saddle, etc.

Technical Details:


| Model | S200 |
|-------------------|-----------------------------|
| Resistance system | Magnetron resistance system |
| Drive way | Belt drive |
| Height limit | 150-185cm |
| Maximum load | 150kgs |
| Weight | 48kg |
| Floor area | 107x48x98 cm (LxWxH) |
| Recommended area | 180x100x240 cm (LxWxH) |
| Console function | Ipad Holder |
| Resistance | 32 Levels |
| Flywheel | 8kg |

Assembly steps

Please confirm that the parts in the carton are complete:

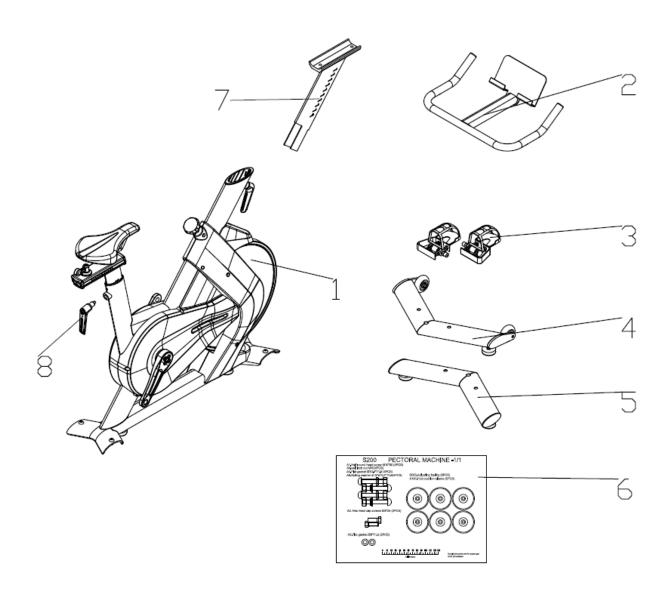



| NO | Name | Quantity | NO | Name | Quantity |
|----|----------|----------|----|-----------|----------|
| 1. | Bike | 1 | 6. | Screw set | 1 |
| | frame | | | | |
| 2. | Handle | 1 | 7. | Front | 1 |
| | bar | | | adjustme | |
| | | | | nt Group | |
| 3. | Pedal | 2 | 8. | Rear | 1 |
| | | | | fastening | |
| | | | | knob | |
| 4. | Front | 1 | | Manual | 1 |
| | bottom | | | | |
| | tube set | | | | |
| 5. | Rear | 1 | | Toolkit | 1 |
| | bottom | | | | |
| | tube set | | | | |

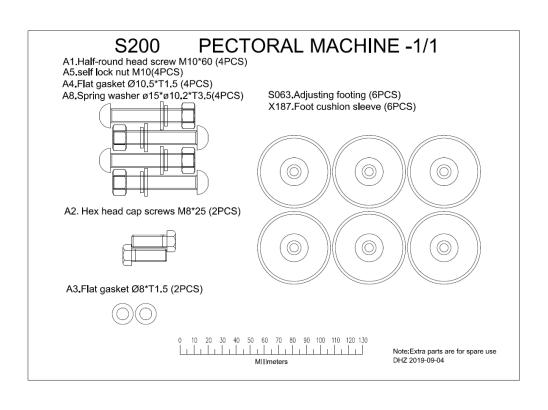



Parts List

| Serial Number | Name | Quantity |
|---------------|----------------------------------|----------|
| A1 | Half-round head screw (M10*60) | 4 |
| A2 | Hex head cap screws (M8*25) | 2 |
| A3 | Flat gasket (ø8) | 2 |
| A4 | Flat gasket (ø10) | 4 |
| A5 | Self lock nut (M10) | 4 |
| A8 | Spring washer (φ10) | 4 |
| S063 group | Adjusting footing | 6 |
| Tool 1 | Inner hexagonal wrench (6#) | 1 |
| Tool 2 | Inner hexagonal wrench (5#) | 1 |
| Tool 3 | Inner hexagonal wrench (4#) | 1 |
| Tool 4 | Open wrench (14-17) | 1 |
| Tool 5 | Open wrench (10-13) | 1 |
| Tool 6 | Three-purpose screwdriver | 1 |

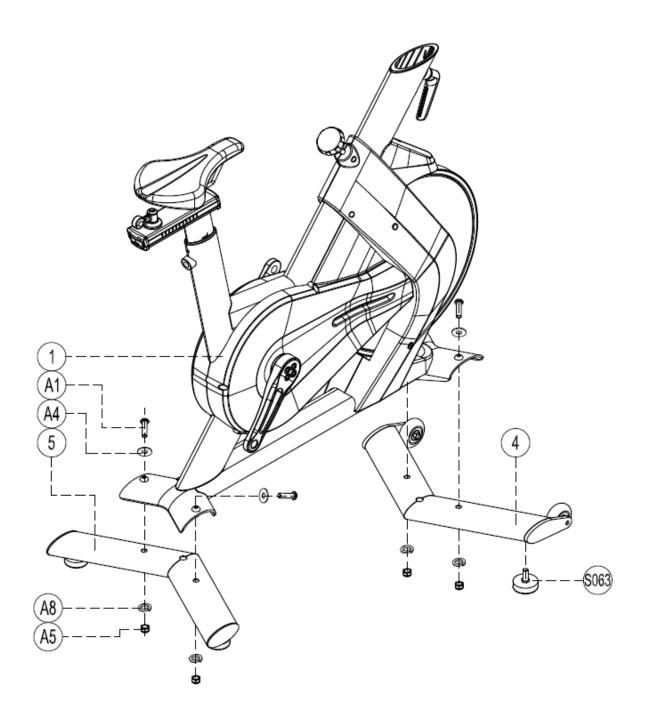


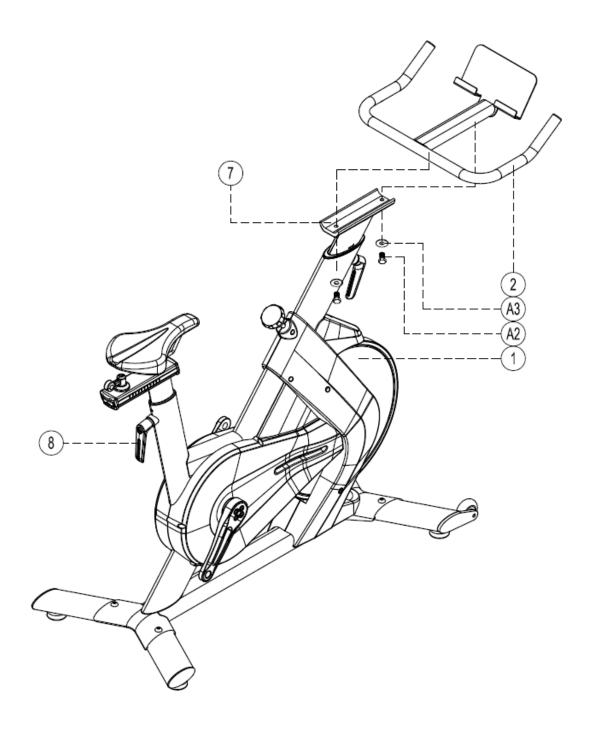


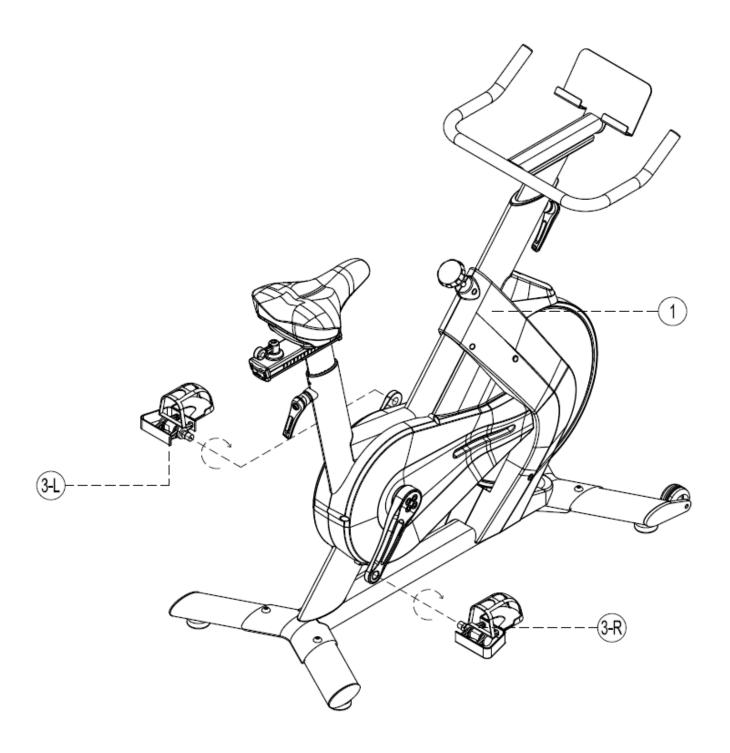

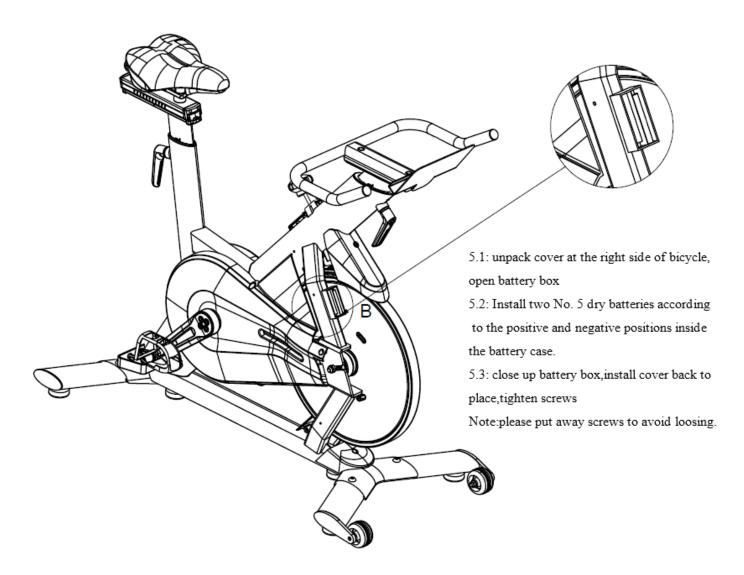


Spinning Bike user adjustment

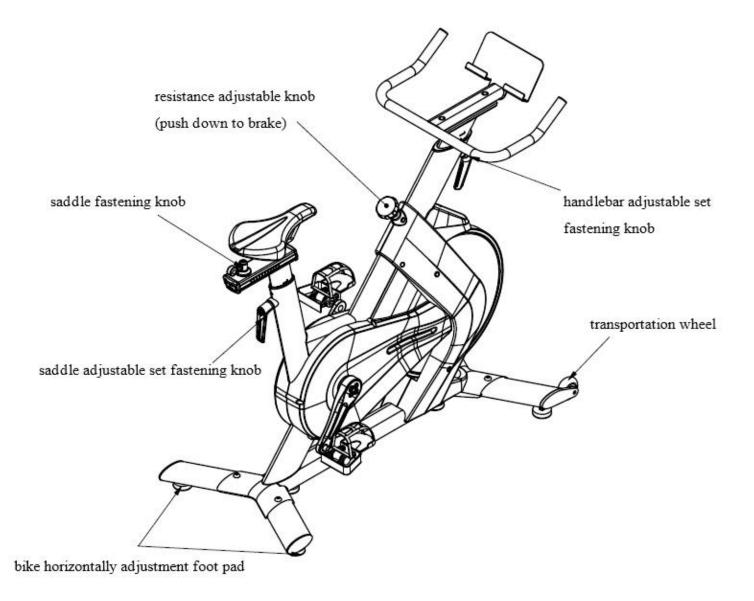

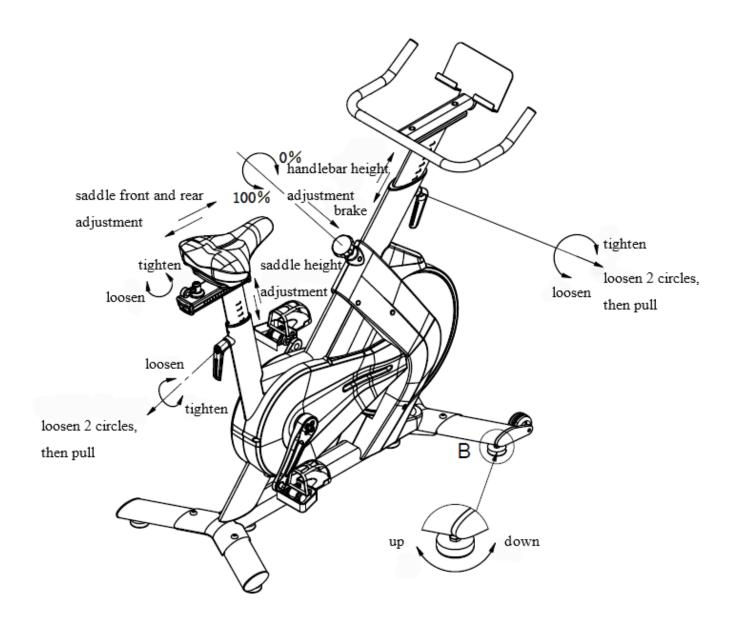

safety warning: tighten the adjustment switch before use

Exploded View

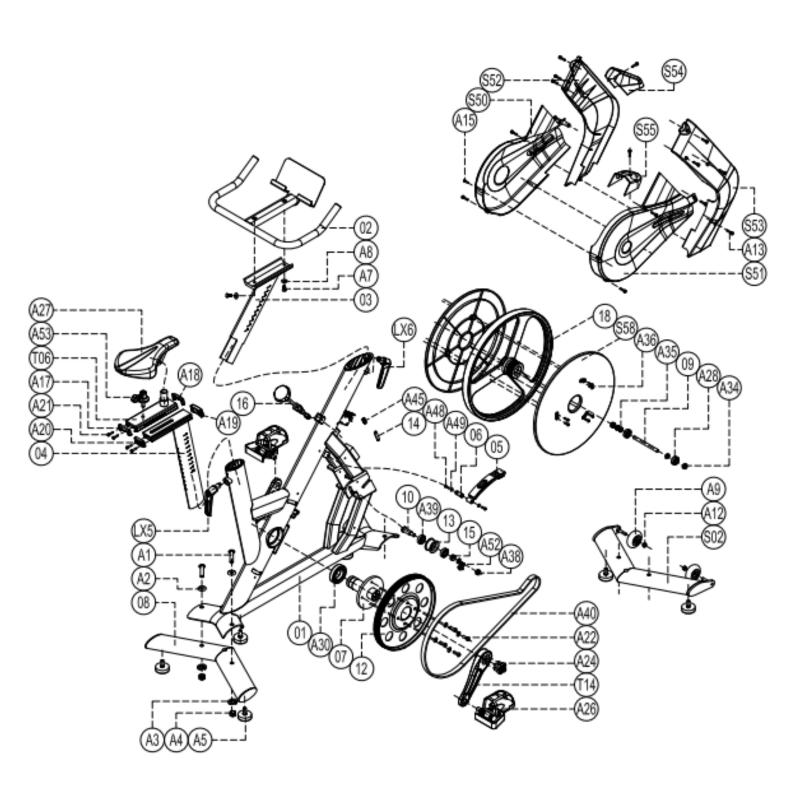

Part List

| Serial No. | Name | Quantity |
|------------|--|----------|
| 1 | Main frame group | 1 |
| 2 | Handlebar set | 1 |
| 3 | Front adjustable set | 1 |
| 4 | Saddle tube adjustable set | 1 |
| 5 | Brake fixing group | 1 |
| T06 | Saddle sliding group | 1 |
| 6 | Small rotating shaft | 1 |
| 7 | Central axis group | 1 |
| 8 | Rear foot set | 1 |
| 9 | Front wheel axle | 1 |
| 10 | Tension shaft | 1 |
| LX5 | Rear pull group | 1 |
| LX6 | Front pull group | 1 |
| T14 | Crank | 2 |
| 12 | Pulley | 1 |
| 13 | Idler | 1 |
| 14 | Small pull plate | 1 |
| 15 | Spacer | 1 |
| 18 | Casting front wheel | 1 |
| 16 | Brake pull pin group | 1 |
| S02 | Front ground group | 1 |
| S50 | Left belt shell tan translucent | 1 |
| S51 | Right belt shell tan translucent | 1 |
| S52 | Left large wheel housing | 1 |
| S53 | Right large wheel housing | 1 |
| S54 | Circuit shield Tan translucent | 1 |
| S55 | Front shield | 1 |
| S58 | Big wheel shell | 1 |
| A1 | Semicircular head inner hexagon screw M10*60 | 4 |
| A2 | Flat pad Φ10 | 4 |
| A3 | Spring washer Φ10 | 4 |
| A4 | Self-locking nut M10 | 4 |
| A5 | Leveling feet | 6 |
| A7 | Outer hexagon screw M8*25 | 2 |
| A8 | Flat pad Φ8 | 2 |
| A9 | PU transportation wheel | 2 |
| A12 | Self-locking nut M8 | 2 |
| A13 | Cylindrical head inner hexagon | 13 |
| | screw M5*12 | |

| A15 | Cross semicircular head | 3 |
|-----|---|----|
| | self-tapping screw M4*12 | |
| A17 | Decorative cover 1 | 1 |
| A18 | Decorative cover 2 | 1 |
| A19 | Decorative cover 3 | 1 |
| A20 | Decorative cover | 1 |
| A21 | Cylindrical head inner hexagon screw M4*12 | 8 |
| A22 | Semicircular head inner hexagon screw M8*16 | 4 |
| A24 | Cylindrical head inner hexagon screw M10*25 | 8 |
| A26 | Pedal 16/9 thread JT01/JT02 | 2 |
| A27 | Saddle DZS300 | 1 |
| A28 | Deep groove ball bearing 6300 | 2 |
| A30 | Deep groove ball bearing 6008 | 2 |
| A34 | Flat nut M10 | 2 |
| A35 | Thin nut M10 | 3 |
| A36 | Semicircular head inner hexagon screw M5*8 | 12 |
| A38 | Self-locking nut M10 | 1 |
| A39 | Deep groove ball bearing 6002 | 2 |
| A40 | Multi-ditch belt 6PJ-1397 | 1 |
| A45 | Spring TH087-3 | 1 |
| A48 | Semicircular head inner hexagon screw M6*12 | 2 |
| A49 | Flat pad Ф6 | 2 |
| A52 | Bike chain tension | 1 |
| A53 | Locking nut handle LZJ046 | 2 |

Produced for:

Gorilla Sports GmbH Nordring 80 64521 Groß-Gerau www.gorillasports.eu